

## Dual Joystick Programming Instructions

Note: For single joysticks see separate programming instructions

Note: Follow the sequence of instructions exactly as indicated

Note: Once initiated, the programming sequence must be completed within two minutes

### PROGRAMMING THE BOW

1. Remove the four-prong connector from any existing receiver. Remove the power connector from any existing joystick. Wait 20 seconds.
2. Plug the four-prong connector into the Bow receiver
  - (a) The receiver should blink red
3. Simultaneously hold the **front (bow)** joystick toggle switch to the right and plug in the black and red power source to the joystick
  - (a) The joystick should beep three times
4. Release the toggle switch
5. Push the **front (bow)** joystick toggle to the right again and hold it. While holding the toggle switch to the right, press the  button on the joystick membrane
  - (a) The joystick should beep once, and shut off

**Note: For installations with two separate helm-mounted joysticks (upper and lower stations) – Once the first joystick is programmed per above instructions leave it plugged into power but turned off, and repeat steps 3-5 with the second joystick**



## **PROGRAMMING THE STERN**

### **Leave joystick(s) plugged into power**

6. Unplug the Bow Receiver
7. Plug the four-prong connector into the Stern receiver
  - (a) The receiver should blink red
8. Push the **front (bow)** joystick toggle switch (NOT the stern toggle switch) to the right and hold it. While holding the bow toggle switch to the right, press the  button on the joystick membrane
  - (a) The joystick should beep once, and shut off

**Note: For installations with two separate helm-mounted joysticks (upper and lower stations) – Once the first joystick is programmed per above instructions leave it plugged into power but turned off, and repeat step 8 with second joystick**

9. Reconnect the bow receiver. Your bow and stern thruster systems are now programmed and ready to operate.

## **PROGRAMMING THE KEY FOB**

1. Ensure the bow and stern receivers are plugged into the four-prong connectors
2. Turn the joystick on by pressing the  button
  - (a) The joystick should beep, and a solid blue light will appear on the joystick membrane
  - (b) Hold the *top* two buttons down simultaneously on the key fob until you hear a beep (around 5 seconds). This will program both the bow and stern thrusters for key fob operation
2. Test the thrusters with the joystick and the key fob to ensure proper operation